

1 Q. Re: 2013 Capital Projects 50,000 and Over but less than 200,000:
2 Explanations, pages E-41 through E-44 Purchase Low Pressure Screw Compressor
3 Set:
4 How often is low pressure required for breaks, pumps and general service?

5
6

7 A. Low pressure air is required for the generator brakes, grease pumps, and general
8 service on an intermittent basis and the frequency of these requirements is not
9 recorded. The brakes for the generating units in Bay d’Espoir can be engaged
10 multiple times throughout the day depending on unit start and stop requirements.
11 The greasing system provides grease to key turbine components as required using
12 an automatic controller with manual input if necessary. Pneumatic tools are
13 primary users of general service low pressure air and can require air on an
14 intermittent basis at various times and locations throughout the plant.